

SODA SYPHON DIRECTIONS


Mr. Fizz Senior Classic - 1 Liter

Model Number: 11105

IMPORTANT!
READ CARE AND SAFETY
WARNINGS BEFORE USE

6 SIMPLE STEPS TO SELTZER

- 1 - ASSEMBLE**
Push the OVERFILL SLEEVE into the bottle, smooth, narrow end first until top is flush with top of body.
- 2 - FILL**
Add ice cold water through the center of the OVERFILL SLEEVE until water rises to top. **IMPORTANT: Never fill without OVERFILL SLEEVE in place!** An air pocket must exist over the water level for gas expansion.
- 3 - ASSEMBLE**
Insert the SYPHON TUBE WITH WASHER into the bottle, through the center of OVERFILL SLEEVE.
- 4 - ASSEMBLE**
Screw on the SYPHON HEAD clockwise firmly. **WARNING: Do not remove the SYPHON HEAD unless the gas pressure has been relieved from the BOTTLE.**
- 5 - GAS CHARGING**
Take one 8g CO2 CARTRIDGE and insert it into the CARTRIDGE HOLDER small end first. Turn the loaded CARTRIDGE HOLDER onto the SYPHON HEAD at the PIERCING AREA. Turn on completely so make a tight seal. **WARNING: 8g CO2 Cartridges contain high pressure. Do not heat or store above 140°F. Never use more than one CO2 Cartridge to charge.**
- 6 - DISPENSING**
Shake well and dispense into a glass by slowly squeezing the DISPENSING LEVER ARM. **WARNING: Do not attempt to remove the SYPHON HEAD without first releasing ALL the internal pressure from the BOTTLE by first squeezing the LEVER ARM.**

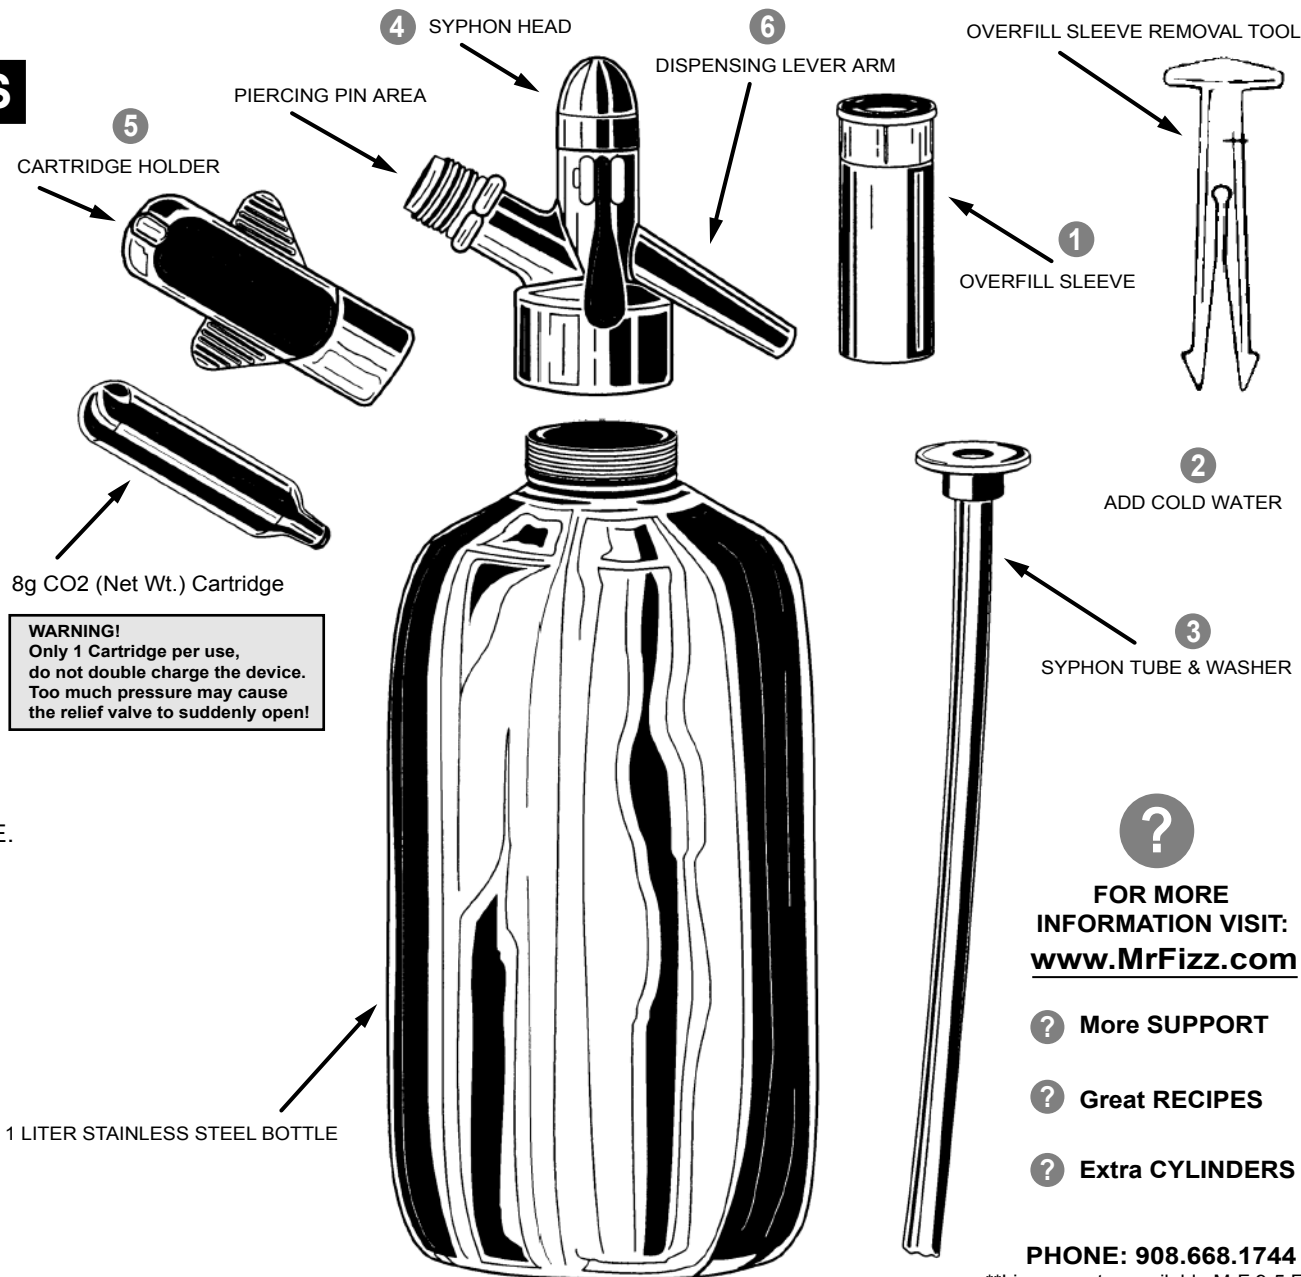

WARNING!
Only 1 Cartridge per use,
do not double charge the device.
Too much pressure may cause
the relief valve to suddenly open!



FOR MORE INFORMATION VISIT:
www.MrFizz.com

- ? More SUPPORT
- ? Great RECIPES
- ? Extra CYLINDERS

PHONE: 908.668.1744
**Live operator available M-F 9-5 EST.
Urgent after hour calls
can be forwarded
to a company technician
by following prompts.

WARNING! High Pressure Device
This pressure carbonation device is designed to be used with a measured amount of water and one 8g CO2 cartridge. Do not heat. Keep from children. Discontinue use if damaged, leaking or broken.